

Music Mode

1. On the I/O panel, long press the LED switch button for 4 seconds.
2. LED will appear flashing; you can change the LED color by switching LED button.
3. To return normal mode, long press the button again for 4 seconds again (LED back to normal brightness).

