




# GAMMIX S70 BLADE HEAT SINK ASSEMBLY GUIDE



## ASSEMBLY STEPS

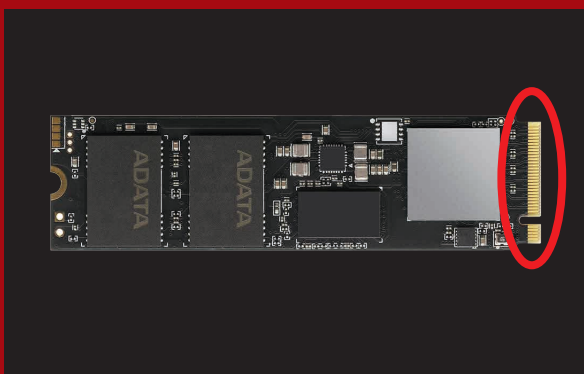

### 1. ORIENT THE SSD


Lay the SSD on a flat surface with the side with the warranty sticker facing downwards. The gold interface connector of the SSD should be on the right-hand side.



### 2. REMOVE BACKING FILM


Remove the backing film from the backside of the heat sink to expose the adhesive.

# ASSEMBLY STEPS

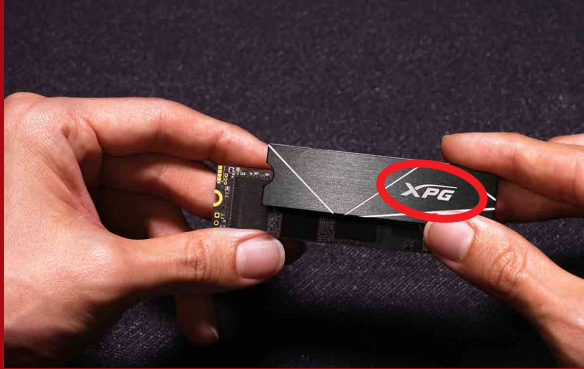




## 3. ALIGN THE HEAT SINK AND ATTACH

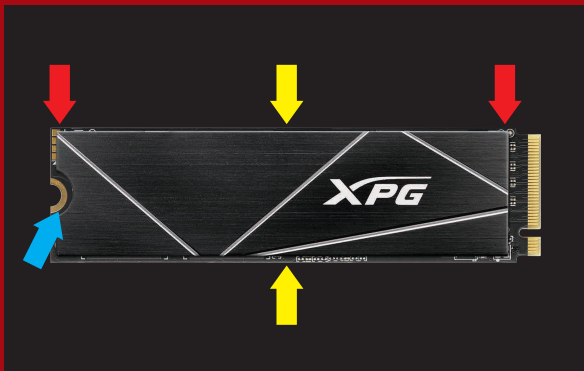With the front of the heat sink facing you and the XPG logo right-side up, carefully align it with the SSD, and then attach it.



## 4. CONFIRM ALIGNMENT

1. After attaching the heat sink, its left side should be aligned with the gold pins in the upper-left-hand corner. The right side should be aligned with the widest corner of the PCB.  (See red arrow)
2. Leave approximately the same amount of space on the top and bottom and ensure they are aligned and centered.  (See yellow arrow)
3. On the left-hand side of the heat sink you should see a semi-circle opening with sufficient clearance  (See blue arrow)




## 5. INSTALL ON MOTHERBOARD

Now install the fully assembled SSD onto your computer's motherboard.

# ASSEMBLY STEPS

## 6. THE FINAL RESULT

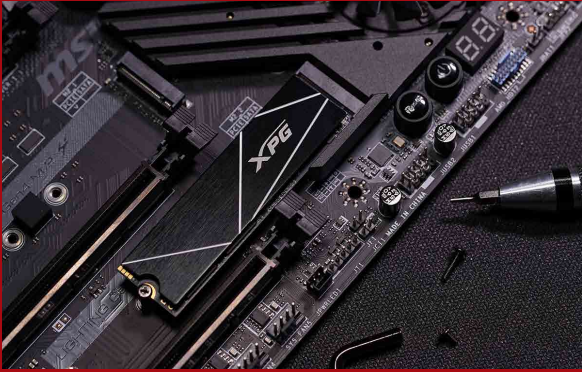

**CUSTOMER SERVICE AND TECHNICAL SUPPORT**

Contact Us: <https://www.adata.com/en/support/online/>