

User's Guide

ADATA[®] SSD TOOLBOX



(Version 2.0)

Revision History

Date	Revision	Description
1/28/2014	1.0	Initial release
2/1/2021	2.0	UI redesign

Contents


Product Overview.....	4
Introduction.....	4
Notice	4
System Requirements	4
Software Limitations	5
Starting SSD Toolbox.....	6
1. Select a Drive	7
2. Drive Dashboard	7
3. SMART Button	8
4. Drive Details Button	9
Diagnostic Scan.....	10
Utilities.....	11
1. Security Erase	11
2. FW Update	13
3. Toolbox Upgrade	13
4. Export Log	13
System Optimization.....	14
1. SSD Optimization	14
2. OS Optimization	14
System Info.....	15
Q&A	15
References.....	16

Product Overview

Introduction

ADATA SSD Toolbox is a user-friendly GUI to obtain disk information and change disk settings. Additionally, it can speed up your SSD and even improve the endurance of ADATA SSD.

Notice

- ADATA Toolbox is only for use with ADATA SSD products.
- **Please back up your data before updating firmware or erasing the SSD.**
- Press the refresh icon  when any changes have been made to the SSD.
- Some situations may result in the drive becoming un-detected. For example, when “Hot-Plug” is disabled in the BIOS setup.
- Some functions will not be supported if the drive is not an ADATA product.

System Requirements

- Supported operating systems include Windows 7 32 / 64-bit, Windows 8 32 / 64-bit, Windows 8.1 32 / 64-bit.
- Minimum 10MB of free capacity is required to run this program.
- The software supports all current ADATA SSDs. Some functions of the software may be limited on specific models. For a complete list of supported devices, refer to http://www.adata-group.com/index.php?action=ss_main&page=ss_software_6&lan=en

Software Limitations

- **Supports physical drive interface only.**
- **Security Erase function only supported in Microsoft Windows® 7 OS.**

Starting SSD Toolbox

You can download ADATA SSD Toolbox from <http://www.adata-> Unzip the file and double-click “SSDTool.exe” to start.

ADATA Toolbox Functions

All functions are categorized into five sub-screens, including Drive Information, Diagnostic Scan, Utilities, System Optimization, and System Information. When you run ADATA SSD Toolbox, the main screen will automatically display drive information screen.

Drive Information Screen

In this screen, you can see detailed information on the selected drive.

The screenshot displays the ADATA SSD Toolbox interface. On the left is a navigation menu with options: Drive Information (selected), Diagnostic Scan, Utility, System Optimization, and System Information. Below the menu is a colorful hummingbird logo and the text: "Copyright© ADATA Technology Co., Ltd. All rights reserved."


The main area shows "Active Drive : 4 Device" with a dropdown menu set to "ADATA SX6000PNP". Below this, two drive information panels are visible:

- Drive 1: ADATA SX6000PNP | PCIe**
 - Drive Health: Good (blue circle)
 - Temperature: 35 °C (pink gauge)
 - Remaining lifetime: 99 % (green gauge)
 - Used: 250.5 GB (blue bar)
 - Free: 703.4 GB (grey bar)
 - Modelname: ADATA SX6000PNP
 - Current Version: VC050288
 - Serial number: 0000000000
 - WWN: 0000000000000000
 - Connection speed: PCIe Gen3 x4
 - Total Bytes Written: 13.11TB
- Drive 2: ADATA SP580 | SATA**
 - Drive Health: Good (blue circle)
 - Temperature: 24 °C (pink gauge)
 - Remaining lifetime: 100 % (green gauge)
 - Used: 335.5 GB (pink bar)
 - Free: 110.0 GB (grey bar)
 - Modelname: ADATA SP580
 - Current Version: XA003R17
 - Serial number: 0000000000
 - WWN: 0000000000000000
 - Connection speed: SATA 6.0 Gb/s
 - Total Bytes Written: 0.00TB

On the right side, there is a vertical banner with the text "BUILT TO CREATE THE BUILDING BLOCKS OF A CREATOR" and a testimonial: "My name is Alex and I am a National Geographic Explorer and filmmaker. My photography and cinematography work is about big cats and threatened species. I have travelled the world filming and studying jaguars." Below the banner is a "Learn more" link.


1. Select a Drive

Active SSDs : **4 Device** 

Simply choose any SSD on the drop-down list, a drive dashboard will appear accordingly. You may also navigate dashboards of all installed drives with the scroll bar on the right. Get the latest drive status by clicking the refresh icon  after an SSD has been plugged in / unplugged.

2. Drive Dashboard

Drive dashboard displays the information including drive health, temperature, remaining lifetime, capacity, model name, firmware version, serial number, WWN*, Interface speed, and TBW*. (Some modules may not support Total Bytes Written function)

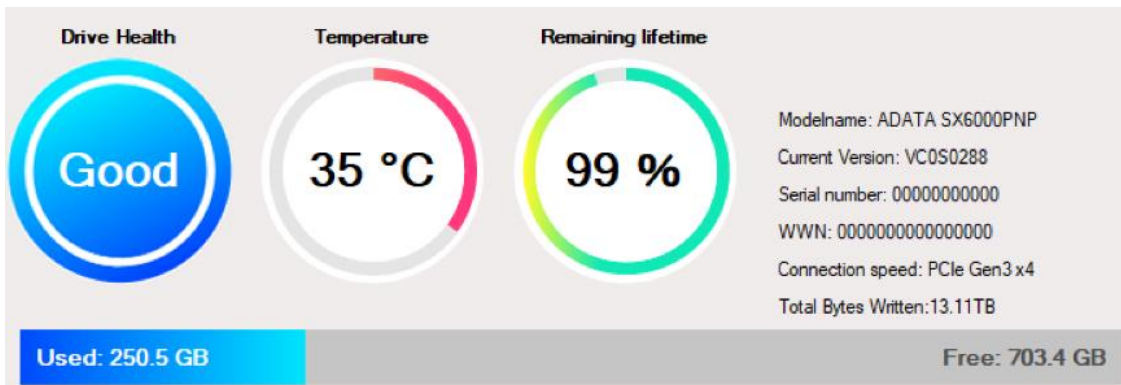

*WWN:World Wide Name
*TBW :Total Bytes Written

3. S.M.A.R.T. Button



Click SMART Details button to reveal S.M.A.R.T. table, which shows Self-Monitoring, Analysis and Reporting Technology attributes on the selected drive. Different brands of SSD may not support all S.M.A.R.T. attributes. For more attributes, refer to the SSD controller specification or link to S.M.A.R.T. attributes at the end of this guide (1).

SMART Detail Information:
ADATA SX6000PNP

ID	Value	Description
01h	0x000000000000	Critical Warning
02h	0x000000000135	Temperature
03h	0x000000000064	Percentage of the available remaining spare capacity.
04h	0x000000000020	Threshold of the available remaining spare capacity.
05h	0x000000000001	Vendor specific estimate of the percentage of device life used.
06h	0x00000178C151	The number of sectors that host has read from the controller.
07h	0x000001A36E33	The number of sectors that host has written to the controller.
08h	0x00000C985C5E	The number of host read commands.
09h	0x000006FB981C	The number of host write commands.
0Ah	0x000000000000	The amount of time the controller is busy with I/O commands.
0Bh	0x0000000005BA	The number of power cycles.
0Ch	0x000000000021	The number of power-on hours.
0Dh	0x0000000003EB	The number of unsafe shutdowns.
0Eh	0x000000000000	The number of unrecovered data integrity error.
0Fh	0x000000000000	The number of Error Information log entries.

4. Drive Details Button Drive Details

Click Drive Details button to check in-depth technical information about the drive. Other values will be displayed when using other ADATA products. For detailed information on the terms used, refer to the ATA specification linked at the end of this guide. (2)


✕

**Drive Detail Information:
ADATA SX6000PNP**

Item	Value	Description
VID	0x10EC	PCI Vendor ID
SSVID	0x10EC	PCI Subsystem Vend...
SN	2K462LCEDJAC	Serial Number
MN	ADATA SX6000PNP	Model Number
FR	VC0S0288	Firmware Revision
RAB	0x00	Recommended Arbitr...
IEEE	0x4CE00000	IEEE OUI Identifier a...
MDTS	0x05	Maximum Data Tran...
Reserved 1 (0-15)	0x01000003010040420F0080841E000003	Reserved 1 (0-15)
Reserved 1 (16-31)	0x00000200000004601100150000000000	Reserved 1 (16-31)
Reserved 1 (32-47)	0x00000000000000000000000000000000	Reserved 1 (32-47)
Reserved 1 (48-63)	0x00000000000000000000000000000000	Reserved 1 (48-63)
Reserved 1 (64-79)	0x00000000000000000000000000000000	Reserved 1 (64-79)
Reserved 1 (80-95)	0x00000000000000000000000000000000	Reserved 1 (80-95)
Reserved 1 (96-111)	0x00000000000000000000000000000000	Reserved 1 (96-111)

Diagnostic Scan

There are two diagnostic scan options available.

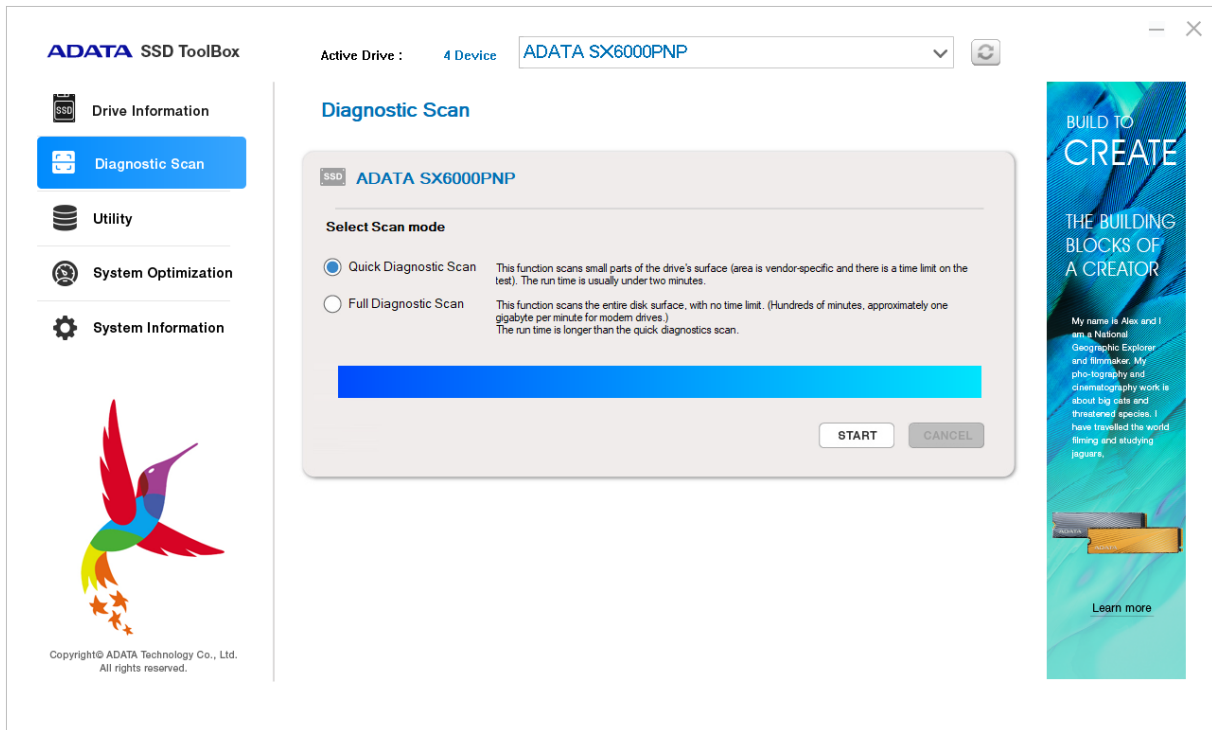


Quick Diagnostics – This option will run basic test on free space of the selected drive. It may take several minutes.

Full Diagnostics – This option will run a read test on all used space of the selected drive, and run a write test on all free space of selected drive.

Utilities

There are multiple services on the Utilities screen, include Security Erase, FW update, Toolbox Upgrade and Export Log.

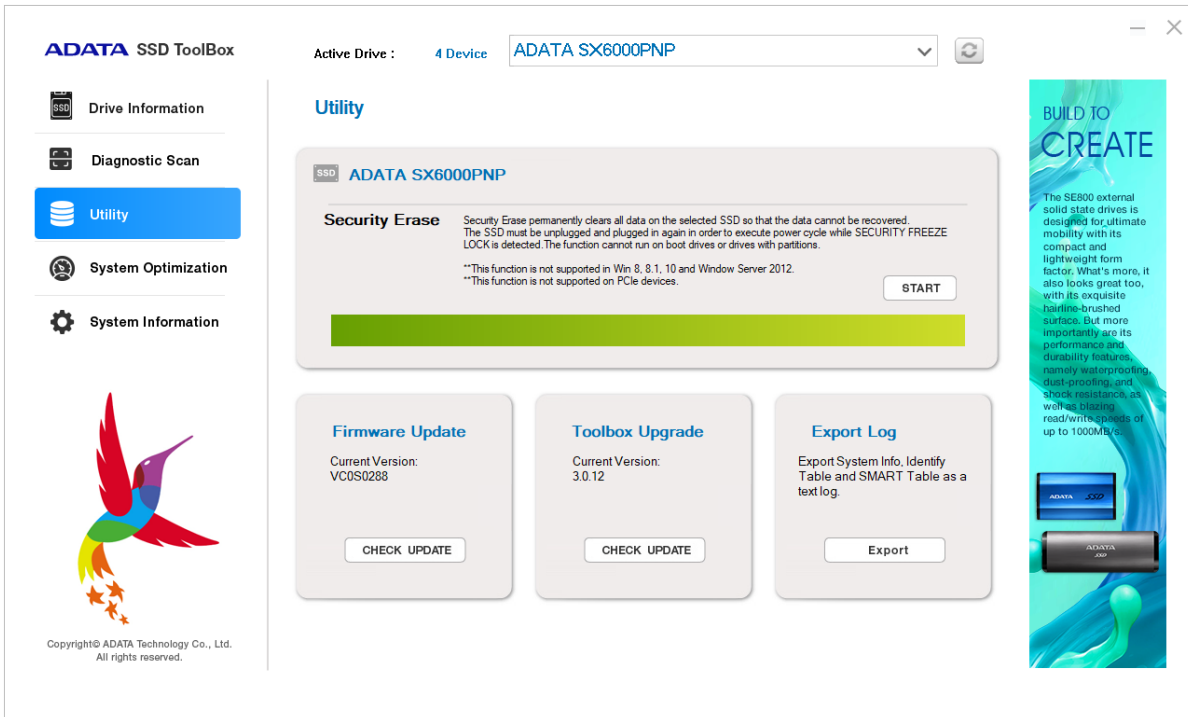

1. Security Erase

- Please remove all of partitions before running **Security Erase**.
- Do not disconnect the SSD while security erase is running. Doing so will result in the SSD becoming security locked.
- This action will delete all data on the drive, and restore the drive to its factory default.


- Running **Security Erase** will reduce the lifespan of the drive. Use this function only when necessary.

Identify the Security Erase Status of an ADATA SSD

Use the steps below to check the security erase status of an ADATA SSD.

- Assign the SSD on the Disk Info screen
- Click Drive Details
- Scroll down to Security Erase (word 128)
- Identify Security Erase Status

What to do if the program displays a “Frozen” message while executing security erase

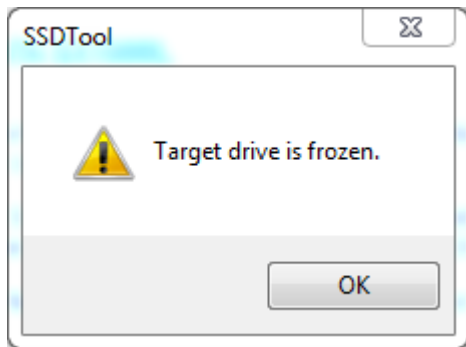


- For security reasons, some platforms will freeze a storage device under certain conditions. This prevents **Security Erase** from running. Hot-plugging the drive may solve this problem.

Unlocking Security Erase while ADATA SSD is Security locked


- Use a third-party tool to unlock
- Unlock Password: ADATA

2. FW Update

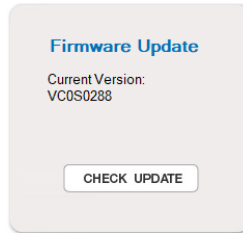

It will link to the corresponding download page for the SSD Firmware directly, allowing you to download the latest FW version.

3. Toolbox Upgrade

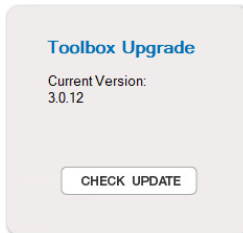

Click the CHECK UPDATE button to download the latest version of this software.


4. Export Log



Click the Export button to download **System Info, Identify Table** and **S.M.A.R.T. Table** as a text log.

System Optimization

There are two way to optimize the selected SSD : **SSD Optimization** and **OS Optimization**.

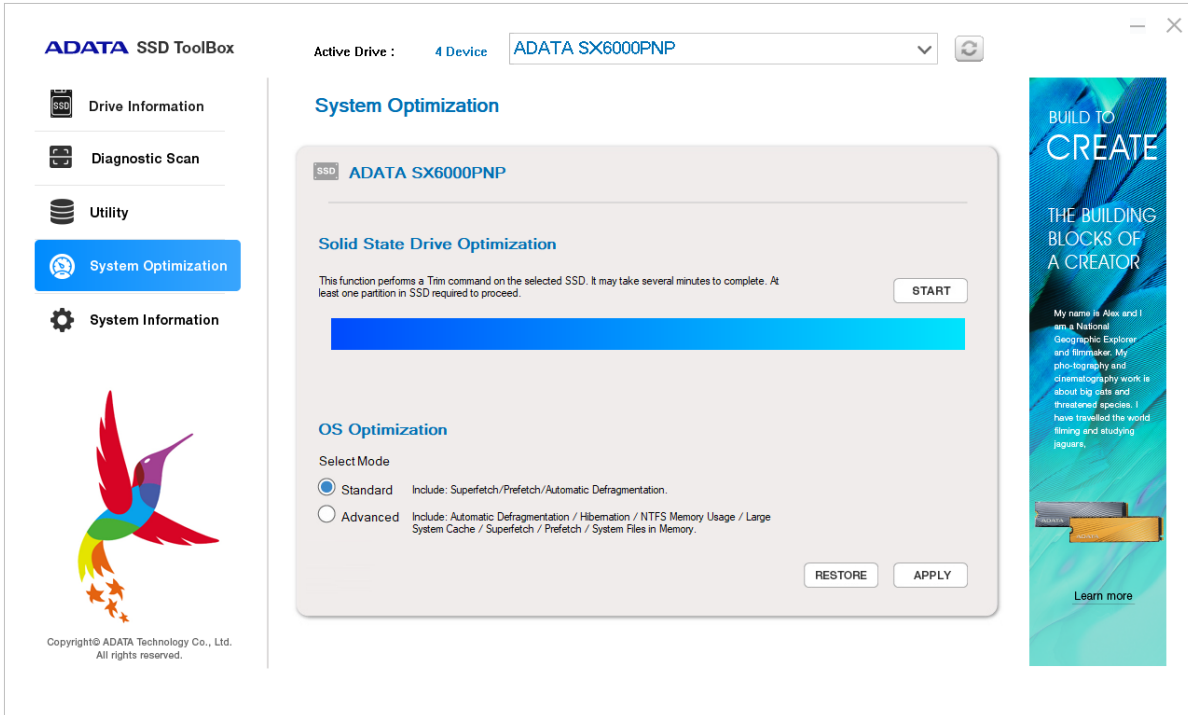

1. SSD Optimization

SSD Optimization provides Trim service on free space of selected drive.

*It is recommended to run SSD optimization once a week.

2. OS Optimization

Standard – Some settings will be changed for Basic OS Optimization, including Superfetch, Prefetch, and Automatic Defragmentation.


Advanced – Some settings will be changed for Advanced OS Optimization including Hibernation, NTFS Memory Usage, Large System Cache, Superfetch, Prefetch, and System File in Memory.

More detailed information can be seen below regarding OS

Optimization: (3)

System Info

Displays current system information, and also provides the links to seek official help, download user manual (SSD Toolbox), and register our SSD products.

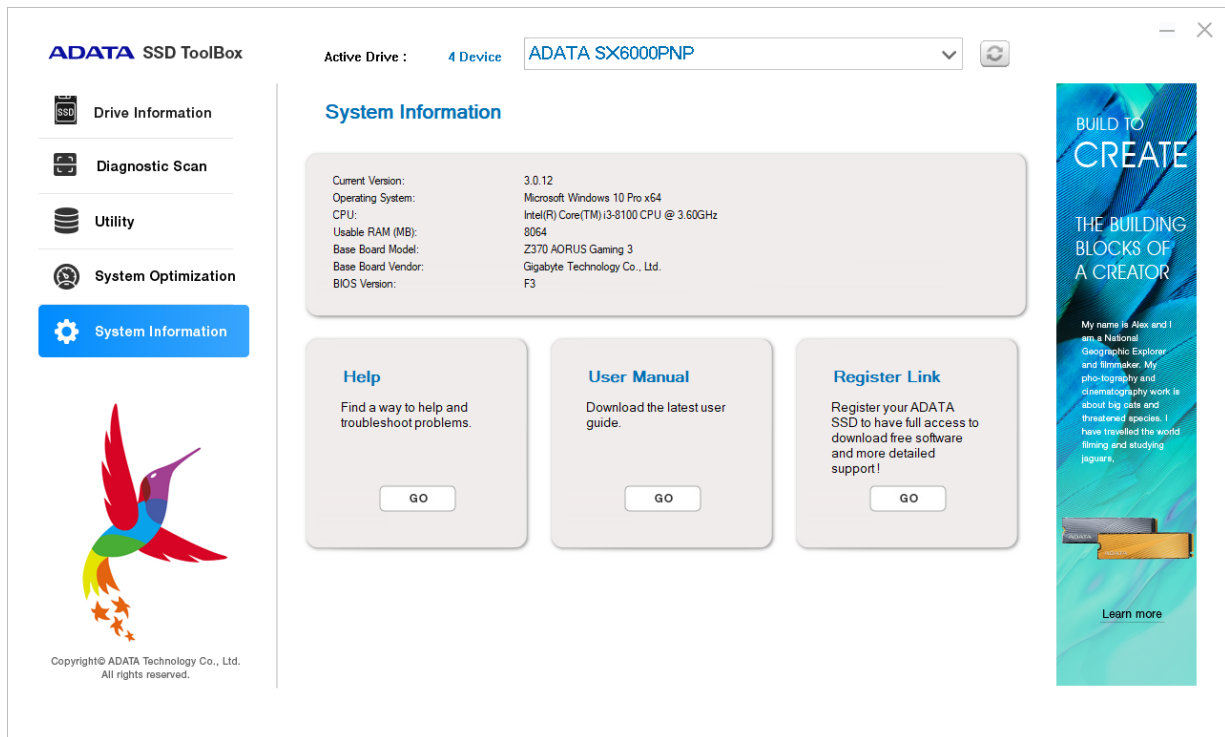

Q&A

If there is some problem when using the toolbox, please visit the following website:

http://www.adata-group.com/index.php?action=ss_main&page=ss_content_faq&cat=Valuable+Software&lan=en

References

(1). S.M.A.R.T.

<http://en.wikipedia.org/wiki/S.M.A.R.T.>

ID	Attribute Name	ID	Attribute Name
01	Read Error Rate - Stores data related to the rate of hardware read errors that occurred when reading data from a disk surface.	0C	Power Cycle Count - This attribute indicates the count of full hard disk power on/off cycles.
02*	Throughput Performance - Overall (general) throughput performance of a hard disk drive. If the value of this attribute is decreasing there is a high probability that there is a problem with the disk.	A7*	Vendor Specific
03*	Spin-Up Time - Average time of spindle spin up (from zero RPM to fully operational [milliseconds])	A8*	Vendor Specific
05	Reallocated Sectors Count -When the hard drive finds a read/write/verification error, it marks that sector as "reallocated" and transfers data to a special reserved area (spare area).	A9*	Vendor Specific
07*	Seek Error Rate - (Vendor specific raw value.) Rate of seek errors of the magnetic heads..	AA*	Vendor Specific
08*	Seek Time Performance - Average performance of seek operations of the magnetic heads. If this attribute is decreasing, it is a sign of problems in the mechanical subsystem.	AB*	Program Fail Count -It shows total count of program fails. The normalized value, beginning at 100, shows the percent remaining of allowable program fails.
09	Power-On Hours (POH) - The raw value of this attribute shows total count of hours in power-on state.	AC*	Erase Fail Count -It shows total count of program fails. The normalized value, beginning at 100, shows the percent remaining of allowable program fails.

0A*	Spin Retry Count - Count of retry of spin start attempts.	AD*	Vendor Specific
AE*	Unexpected Power Loss Count - Counts the number of unexpected power loss events since the drive was deployed.	C5*	Current Pending Sector Count - Count of "unstable" sectors (waiting to be remapped, because of unrecoverable read errors).
AF*	Vendor Specific	C9*	Uncorrectable Soft Read Error Rate - Number of soft read errors that cannot be fixed on-the-fly and requires deep recovery via RAISE
B1*	Wear Range Delta - Returns the percent difference in wear between the most-worn block and least-worn block.	CC*	Soft ECC Correction Rate - Number of errors corrected by RAISE that cannot be fixed on-the-fly and requires RAISE to correct.
B5*	Program Fail Count - Total number of Flash program operation failures since the drive was deployed	E6*	Life Curve Status -A life curve used to help predict life in terms of the endurance based on the number of writes to flash
B6*	Erase Fail Count -Four bytes used to show the number of block erase failures since the drive was deployed	E7*	SSD Life Left -Indicates the approximate SSD life left, in terms of program/erase cycles or Flash blocks currently available for use
BB*	Reported Uncorrectable Errors -The count of errors that could not be recovered using hardware ECC	E9*	Vendor Specific
C0*	Unsafe Shutdown Count - Count of times the heads are loaded off the media. Heads can be unloaded without actually powering off.	EA*	Vendor Specific
C2	Temperature -Current internal temperature.	F0*	Vendor Specific
C3*	On-the-Fly ECC Uncorrectable Error Count -This attribute tracks the number of uncorrectable errors	F1*	Lifetime Writes from Host -Indicates the total amount of data written from hosts since the drive was deployed.

C4*	Reallocation Event Count -Count of remap operations. The raw value of this attribute shows the total count of attempts to transfer data from reallocated sectors to a spare area. Both successful & unsuccessful attempts are counted	F2*	Lifetime Reads from Host - Indicates the total amount of data read to hosts since the drive was deployed.
-----	--	-----	--

Some S.M.A.R.T. attributes may differ for different drives. These are marked with an asterisk *.

(2). ATA Command Set

http://www.t13.org/Documents/UploadedDocuments/docs2013/d2_161r5-ATAATAPI_Command_Set_-_3.pdf

(3). OS Optimization

Superfetch	http://msdn.microsoft.com/en-us/library/ff794183(v=winembedded.60).aspx	
	Hkey_local_machine\SYSTEM\CurrentControlSet\Control\Session Manager\Memory Management\PrefetchParameters\EnableSuperfetch. Set to 0.	EnableSuperfetch is a setting in the File-Based Write Filter (FBWF) and Enhanced Write Filter with HORM (EWF) packages. It specifies how to run SuperFetch, a tool that can load application data into memory before it is demanded.
Prefetch	http://msdn.microsoft.com/en-us/library/ms940847(v=winembedded.5).aspx	
	Hkey_local_machine\SYSTEM\CurrentControlSet\Control\Session Manager\Memory Management\PrefetchParameters\EnablePrefetch. Set to 0.	Prefetch is a utility that is intended to improve Windows and application startup performance by loading application data into memory before it is demanded. When using EWF with a RAM overlay to protect the boot volume, Prefetch is unable to persist its data from startup to startup.

Automatic Defragmentation	http://msdn.microsoft.com/en-us/library/bb521386(v=winembedded.51).aspx	
	HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Dfrg\BootOptimizeFunction\Background Disk Defragmentation Disable	Defragmentation is the process of moving portions of files around on a disk to defragment files, that is, the process of moving file clusters on a disk to make them contiguous
Hibernation	http://msdn.microsoft.com/en-us/library/ff794011(v=winembedded.60).aspx	
	HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\Power\HibernateEnabled	HibernateEnabled specifies whether the user of a device will be given the option of turning on or turning off hibernation. Set to 0.
NTFS Memory Usage	http://technet.microsoft.com/en-us/library/cc785435(WS.10).aspx	
	HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\FileSystem\NtfsMemoryUsage	NTFS increases the size of its lookaside lists and memory thresholds. Set to 2.
Large System Cache	http://msdn.microsoft.com/en-us/library/aa394239(v=vs.85).aspx	
	HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\SessionManager\MemoryManagement\LargeSystemCache	Optimize memory for system performance. Set to 1.
System Files in Memory	http://technet.microsoft.com/en-us/library/cc959492.aspx	
	HKLM\SYSTEM\CurrentControlSet\Control\SessionManager\MemoryManagement	Drivers and the kernel must remain in physical memory. Set to 1.